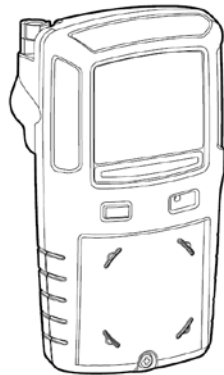

BUMP TEST INSTRUCTIONS



GasAlert
Max XT II

1, 2, 3, and 4-Gas Detector

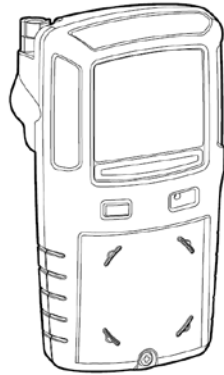
A bump test simply confirms that the alarm and sensors are responding to gas by exposing the detector to a gas concentration that exceeds the lowest alarm set point. This means that you must manually apply gas and **verify that the audible and visual alarms are activated before each day's use** (aka bump test).

Note: Bump tests and calibrations must be performed in a fresh air environment. **DO NOT** bump test or calibrate the detector while charging or immediately after charging the unit. Allow at least one hour cool-down after charge.

Performing a Bump Test:

1. Turn on the air monitor and follow the prompts to Block and Unblock Inlet (pump).
 - a. Allow the unit to Self-Test and wait for the **green flashing light**.
 - b. **If the light does not flash, DO NOT USE THE UNIT.**
2. Thread the regulator to the cylinder.
3. Connect the calibration hose to the regulator.
4. Open the gas valve.
5. Attach the hose quick connector to the pump connection.
6. The unit should respond to the gas and the **audible and visual alarms (flashing red lights) will activate**. That means that the **Bump Test is Complete and Successful!** *The detector will temporarily remain in alarm until the gas clears from the sensors.*
 - a. **If the alarm does not sound when applying gas (failed bump test), DO NOT USE the unit.** Call the Safety Department to get an air monitor that is in proper working condition.
7. Turn off the gas; disconnect the hose from the pump; remove the hose from the regulator; remove the regulator from the gas cylinder.
8. Charge the air monitor after every workday and store and maintain all supplies in carrying case.

BUMP TEST INSTRUCTIONS



GasAlert
MaxXT II

1, 2, 3, and 4-Gas Detector

